3gb91700.fm Page 1 Thursday, September 5, 2002 10:07 AM

Whirlpool

DishDrawer®

GB

Quick Reference Guide

Before using the dishwasher, read the user and installation instructions!

Programme chart			Eco Option button	Detergent [2]		Consumption using one drawer (single drawer)			Consumption using two drawers (double drawer)		
Programmes		Loading Instructions	eco	1. Prewash compartment	2. Main wash compartment	Litres	kWh	Minutes	Litres	kWh	Minutes
Intensive	**70°C**	Heavily soiled pots, pans & dishes.	-	X	X	15.0	0.97	130	30.0	1.94	130
Intensive Eco	**60°C**	Heavily soiled every day dishes.	X	X	X	12.5	0.76	125	25.0	1.48	125
Normal	**65°C**	Dishes with normal soils for optimum wash & dry performance.	-	X	X	12.0	0.81	111	24.0	1.57	111
Normal Eco [1]	**50°C**	Normal soiled dishes for optimum energy use.	X	X	X	12.0	0.67	180	24.0	1.30	180
Rapid	**50°C**	Lightly soiled dishes.	-	-	X	7.5	0.47	56	15.0	0.89	56
Rapid Eco	**45°C**	Lightly soiled non greasy dishes.	X	-	X	7.5	0.34	42	15.0	0.66	42
Delicate	**55°C**	Lightly soiled and heat-sensitive crockery such as crystal ware.	-	-	X	10.0	0.62	96	20.0	1.22	96
Delicate Eco	**45°C**	Non greasy, lightly soiled & heat sensitive crockery such as crystal ware.	X	-	X	10.0	0.46	91	20.0	0.89	91
Pre-Rinse	**cold**	To prevent odours & soil drying on dishes.	-	-	-	3.0	0.03	12	6.0	0.05	12

1) **Reference programme for energy label in compliance with EN 50242 regulations.**
2) **Refer to "User Instructions".**

NOTE: Wash times can vary depending on the incoming water temperature, ambient conditions, type of dish load and whether the drawer has been opened during the wash. Wash times are only APPROXIMATE on the Electronic display and based on 20°C incoming water.

Whirlpool is a registered trademark of Whirlpool USA

5019 396 91700

Black process 45.0° 100.0 LPI

3gb91700.fm Page 2 Thursday, September 5, 2002 10:07 AM

DISHWASHER STANDARDS TEST

The DishDrawer®s are tested to EN50242 standards for both wash and dry performance. The following are loading pattern diagrams, detergent quantities and rinse aid quantities used for the DishDrawer®.

Wash Programme	Normal Eco
Detergent Quantities	2.5 g (pre wash) per drawer 12.5 g (main wash) per drawer
Water Softener Setting	Adjust the water softener to match the water hardness. Refer to the water softener and option adjustment mode section of the User Guide.
Maximum Place Setting	Double drawer: 12 Single drawer: 6
Accessories to be used in the Dishwasher Standards Test	Basket, drain filter access panel, mega rack, plate insert, cutlery basket, cup racks and cup shelves.

To install The Cup Support Assembly

Note
The front cup support assembly is longer than the rear.

Loading Particulars For The Cups

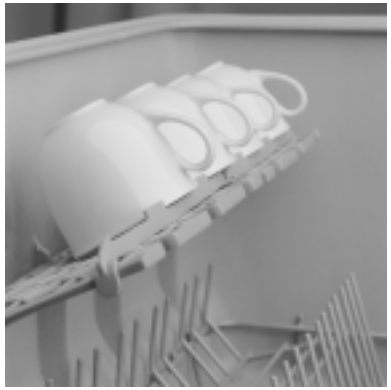

Recommended Loading Pattern - double drawer

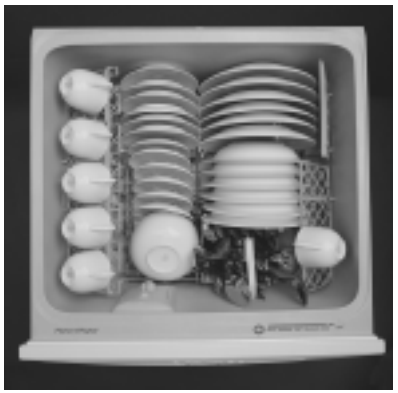

Top drawer

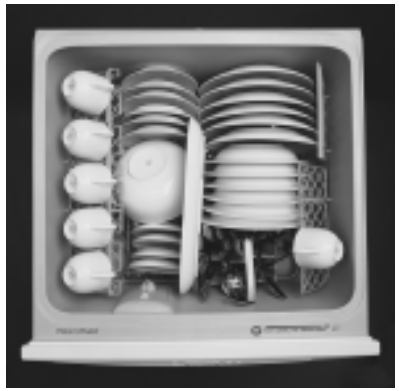

Bottom drawer

Recommended Loading Pattern - single drawer

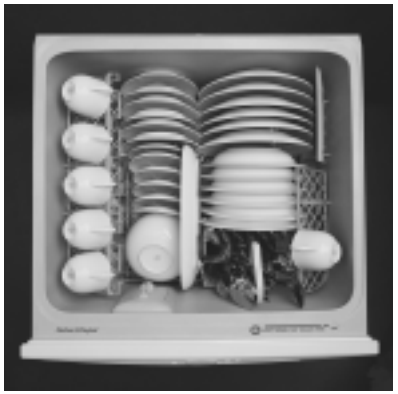

5019 396 91700

Whirlpool is a registered trademark of Whirlpool USA

Black process 45.0° 100.0 LPI